



Preparation of WireO Fully-concealed binding

Start for scoring and folds for concealed WireO. Adjust to job.
 Try to keep ring wire close to spine (1/16")

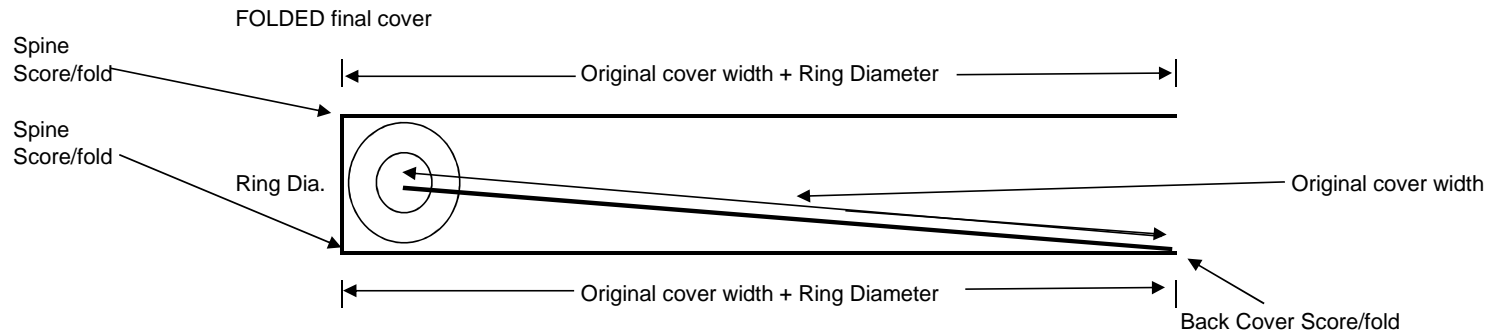

FLAT press sheet

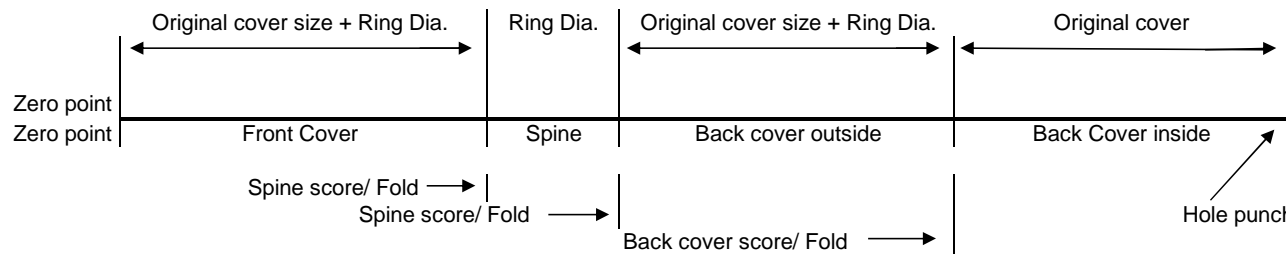

Remember to allow bleeds on the front cover and the back cover. This allows us to make minor adjustments when needed.